LA GARD

FACTORY OPENING CODE: 50

Mechanical Combination Locks

1985/ 3330/ 3332/ 3370/ 3390

Operating Instructions

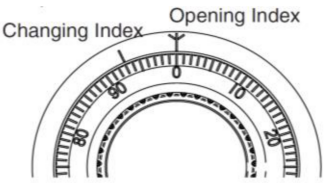

Fig. 1: Dial

Important Notes:

• Security advice: Alter the delivered combination immediately to your own personal combination. Do not use any personal or other similarly well-known data (e.g. birthdays or telephone numbers) when selecting this combination and keep the combination in a safe place.

• The locking mechanism works smoothly. No force should be applied – particularly when inserting the change activator into the lock.

• Using a wrong change activator with the lock (e.g. use of activator of 4 wheel combination lock for 3 wheel combination lock or vice versa) can result in damage to the lock.

• Never grease, oil or spray the lock.

• The lock may only be installed by specialist personnel. Manipulation of any lock parts will lead to invalidation of any warranty claims.

• **Always turn the dial slowly and carefully. You can stop the turning as often as you want to. Stop the last turn when the part of the combination is exactly lined-up on the Opening- or Changing-Index. If you turn past a number in the combination while dialing, do not turn the dial backwards. In that case you need to redial the entire combination.**
Do not apply any force!

Operation with example combination 10-20-30

A. Open the lock (using opening index):
4 x Turn dial LEFT until the first part of the opening combination e.g. “10” is exactly the fourth time on opening index.
3 x Turn dial RIGHT until the second part of the opening combination e.g. “20” is exactly the third time on opening index.
2 x Turn dial LEFT until the third part of the opening combination e.g. “30” is exactly the second time on opening index.
Turn dial RIGHT to open the lock.

B. Closing the lock:
Turn dial at least 4 times LEFT to discard the combination.

C. Changing to new opening combination (using changing index):
Before setting a new combination you must first open the lock and the safe door (according to article A) and then close the lock by door open (turn the dial at least 4 times LEFT).

ATTENTION: If a changing process has already been processed until article C.3 and first settings have been done the process cannot be canceled and the complete changing process must to be finished until article C.4.

C.1 Prepare changing process (using changing index):
4 x Turn dial LEFT until the first part of the opening combination e.g. “10” is exactly the fourth time on changing index.
3 x Turn dial RIGHT until the first part of the opening combination e.g. “20” is exactly the third time on opening index.
2 x Turn dial LEFT until the third part of the opening combination e.g. “30” is exactly the second time on opening index.
If turned too far by setting one part of the opening combination, this error cannot be corrected by turning back the dial.
In this case, repeat the whole setting of the new opening combination according to article C.1.

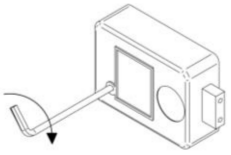
Fig. 2: Change activator

C.2 Using change activator:
Insert long side of the change activator into the activator hole at the inner door. Turn the change activator approx. 90° to the RIGHT until it stops (figure 2). If a change label (figure 3) is used, the positions of the change activator are shown. If the change activator cannot be turned, a mistake was made by setting the existing opening combination (within article C.1). Remove the change activator and re-dial the existing combination by using the changing index according article C.1.
Do not apply any force!

C.3 Set a new opening combination:
Each part of the opening code should differ at least by 4.
Attention: The 3rd part must be higher than 20!
4 x Turn dial LEFT until the first part of the opening combination is exactly the fourth time on the changing index.
3 x Turn dial RIGHT until the second part of the opening combination is exactly the third time on the changing index.
2 x Turn dial LEFT until the third part of the opening combination is exactly the second time on the changing index.
If turned too far by setting one part of the new combination, this error cannot be corrected by turning back the dial. In this case, repeat the whole setting of the new opening combination according to article C.3. **Attention: In case of the settings have to be repeated, the change activator must never be turned by repeating the settings!**

Fig. 3: Change label

C.4 Finish changing process:
After the new opening combination has been set correct, turn the change activator approx. 90° LEFT until it stops and pull out the change activator carefully. The lock is now adjusted to the new opening combination.
Please test opening and closing the lock several times with the new personalized opening combination by having the safe door open.